

1. Power ON/OFF

* After switching off power, the motor will not be able to receive remote signals.

Power ON



Move switch to '1'



The red light flashes once - the motor is now on

Power OFF



Move switch to '0'



The motor is now off

2. Setting Mode

* If there is no action in 10 seconds, the motor will exit setting mode automatically

Method A



Press PROG button for 1s



Motor jogs once. The motor is now in setting mode

OR

Method B - (Paired Control Only)



Press and hold the STOP button: Only on pre-programmed remote for 5 secs.



Motor jogs once. The motor is now in setting mode

3. Pairing Remote or Add New Remote



While in setting mode, Press up button (10 Secs)

Motor jogs once, the motor and remote are now paired

4. Adjust limit



Adjust motor to the current limit position.



Then press the SET button once



The motor jogs once



Fine-tuning the motor to the desired position

 


Press SET button to save settings



The motor jogs once again. Fine tuning is done.

5. Setting Intermediate Limits



Adjust motor to the desired Intermediate position.



Then press the SET button once



The motor jogs once

 


Press back SET button once to save settings



The motor jogs once. Intermediate limit set.

6. Delete Intermediate limit Position



Adjust the motor to the limit that needs to be deleted.



Then press SET for 7 Secs




The motor jogs once after 1s then goes into setting mode




The motor jogs once again after 7 Secs, the Intermediate limit position is now deleted.

7. Channel Locking / Reducing Visible Channels on 6 Ch. Remote Control

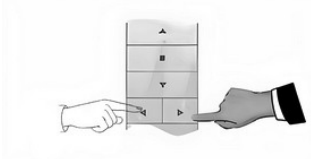

Select LEFT or RIGHT button and select desired channel you want to lock on. E.G. select 2 if you want 2 channels only.

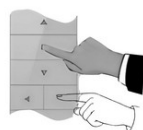

Press STOP and RIGHT buttons together for 3 seconds until remote indicator flashes twice. Only channels 1 & 2 will now operate. Press stop and left for 3 seconds to revert to 6 channels

 
8. Add An Extra Remote



Press and hold STOP on programme remote for 5 secs. Motor will jog.



Motor jogs once



Press UP on new remote. Motor oscillates again. The new remote is now added.



Motor jogs once

Or use step 2 if original control is not available.

9. Delete Single Channel - Already Programmed



While in setting mode, press SET on the back of the programmed remote



Motor jogs once, single remote is deleted

10. Jog Mode

The default movement of the motor is continuous. It can be changed to jog movement or back to continuous movements for blind positioning or during fine tuning mode. IF APP controlled, it is continuous movement.



Press and hold 'STOP' button on the programmed remote for 5 secs. The motor oscillates once.



Press STOP again. The motor oscillates again, the movement mode is changed



11. Reset Motor (Factory Reset)

* Make sure the interval between every action is less than 1 sec.

Method A



Short press PROG button, release when red light comes on



Short press PROG button again, release when red light comes on



Press and hold PROG for 3s, release until red light flashes twice



Press PROG button and hold until motor jogs twice. The reset is done

Method B



Press STOP of the programmed transmitter for 5s



Motor jogs once



Press back SET for 7 Secs within 10 Secs.



Motor jogs once in 1s



Motor jogs two more times in 7s. The reset is done

12. Change Direction



While in setting mode - press the remote 'DOWN' button



Motor jogs once, the motor direction is now reversed.

13. Upper & Lower limit setting (If limits not already set) * Both up & down limits must be set during this process



Press SET on the programmed remote for 1s



The motor jogs once, it is now in setting mode



The first limit can be Upper or Lower limit. If you press UP then Upper limit is the first limit.



If you press DOWN then Lower limit is the first limit.



1st Limit



Adjust the motor to desired position, press STOP



Then press SET



Motor jogs once, the 1st limit position is saved.



Adjust the motor to desired position, press STOP.



2nd Limit



Then set for 1 sec.



The Motor jogs once, the 2nd limit position is saved.



Press SET button again to confirm & save limits



The motor jogs once again, the limit position setting is done

14. Reset Bluetooth * Make sure the interval between every action is less than 1 sec.

A: Short press the PROG button, release when red light comes on, repeat this action 4 times.

OR

B: Long press PROG button and hold for 3 Secs until green light flashes.

15. Supplementary Instruction

A. The first and second position are Upper/ Lower limit positions. The other four are intermediate positions (if required).

B. After the Upper / Lower limit position are set, all the intermediate positions can be set between them.

C. The Upper and Lower limit position can only be fine-tuned once set. They can only be removed by resetting the motor.

D. Press the Up or Down button once and the motor will move to the next pre-set limit position. When the upper position is reached, the Up button will be unresponsive. When the lower position has been reached, the Down button will become unresponsive.

E. Press and hold the Up or Down button until the indicator on the programmed channel flashes twice. Release the button, and the motor will move to the Upper or Lower limit position without stopping at any intermediate position.

F. If battery level is lower than 5.5V, the motor will stop working.

G. The light turns to red during recharging. It turns to green when it is fully charged, at which point the charger should be removed to avoid battery damage




QR CODE LINK TO THIS GUIDE


16. Instructions for Operating Blinds Via Bluetooth & App




1. Scan the QR code above, or search Google or Apple App stores for 'TuyaSmart' App. Install this App and register your details. Ensure bluetooth is switched on Mobile before operation.

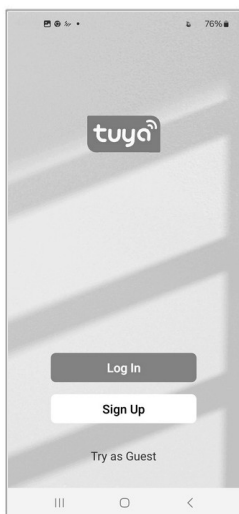


2. Once the APP is installed create a new account if using for the 1st time or log in.

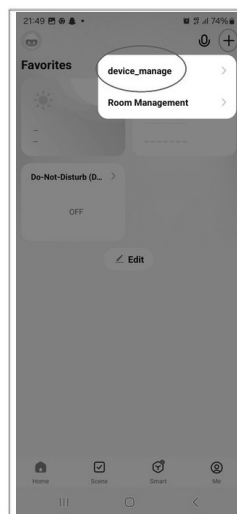


3. Once logged in, it will bring you to a 'Favourites' page, click the '+' button at the top and then 'Device Manager' in the drop down menus as per circled in red above.

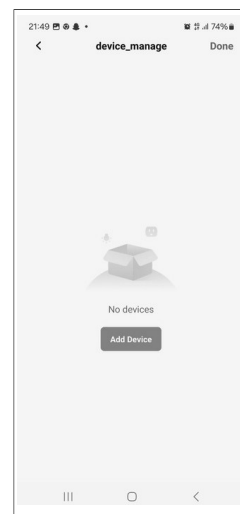


4. A screen will now appear to 'Add device'. When you click on this it will ask you to allow the App to access the devices location. Select your preference.

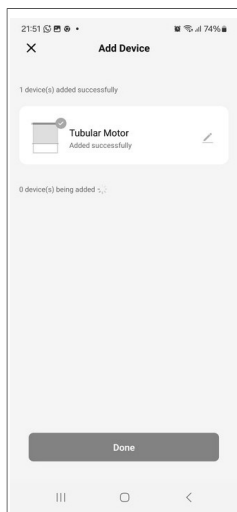


5. The App will now find the Motorised blinds in the locality. Select the option you want, as per the 'Tubular Motor' example above and click 'Done'.

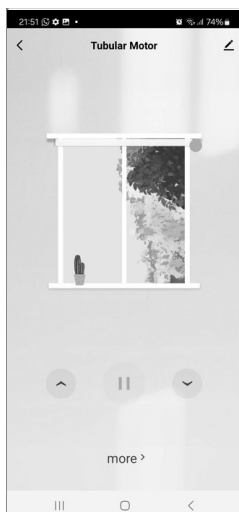

6. You are now in the screen where the blind is displayed and can be controlled via the on screen up and down buttons.

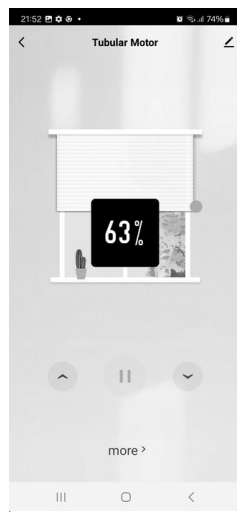

7. Click the up and down arrows or the Pause/ Stop to control the blind to the position you require. Click 'more' for extra options under 'Settings'.

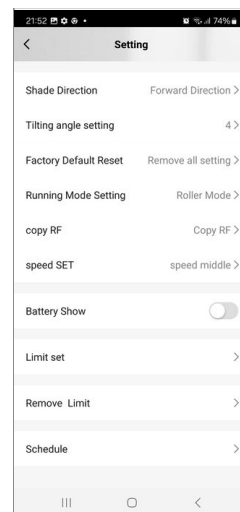

8. Under 'Settings' see other additional options and settings.

Trouble Shooting

Item	Problem	Matter	Shooting
1.	Motor does run or runs slowly	Over- load protection	Motor has been operated frequently in a short space of time or is being operated in hot conditions. Allow the motor to cool before next operation.
2.	Motor does run or runs slowly	Motor has reached its limit	Motor has reached a pre-set limit. Operate the blind in the opposite direction and check for movement.
3.	Motor does run or runs slowly	Recharge the battery	Motor has been operated frequently in a short.
4.	Motor does run or runs slowly	In power off mode	Turn power on to the motor.